THE ATARI 400TM COMPUTER SYSTEM

THE BASIC **COMPUTER**



OWNER'S GUIDE





A Warner Communications Company W







Insert the Star Raiders™ cartridge and become a Starship Commander! Arm your attack computer, jump through hyperspace and battle the the attacking Zylon fighters!

The Entertainer*comes with a pair of joystick controllers and two of the world's most exciting computer games—Star Raiders and Missile Command.™ To play Star Raiders, all you do is insert the cartridge, plug in a joystick and get ready for high-speed combat.

Many other exciting computer games for your ATARI computer are available now or will be available soon.

 
AsteroidsTM
Space Invaders¹
Super Breakout[®]
3-D Tic-Tac-Toe
Video EaselTM
Basketball
Computer Chess

THE PROGRAMMER'

Even if you've never written a program before, The Programmer will have you writing BASIC programs in just a few minutes. After that, the possibilities are limitless—you can solve business or scientific problems, invent your own games or even compose music.

The Programmer comes with an ATARI BASIC Computer Language cartridge, the ATARI BASIC BASIC Reference Manual and the ATARI BASIC Self-Teaching Guide that teaches you how to program in easy-to-follow steps.





¹Trademark of Taito America Corporation.



^{*}ATARI reserves the right to substitute another game cartridge for Missile Command.TM

The Communicator can tap into some of the biggest electronic brains in the world! Get the news hot off the wire or have the Communicator print your stock prices right on your TV screen. You'll also be able to get electronic mail, games and even "talk" to other users.

The Communicator comes with a TeleLink™ l cartridge, an ATARI 850™ Interface Module and an ATARI 830™ Acoustic Modem so you can send and receive information over any standard telephone. You also receive a free hour of connect time to the Dow Jones Information Service, the CompuServe Information Service and The Source Telecomputing, so you can see the many fascinating kinds of information the computer can give you.

Let the computer teach you a variety of subjects and skills. It can help you and your children learn faster because The Educator makes learning fun.

The Educator comes with an ATARI 410^{TM} Program Recorder to load your programs, a BASIC cartridge and the States & Capitals program cassette. All you do is insert the cartridge, plug in the cassette recorder and load the program—the computer takes it from there.

Many other educational and self-improvement programs and games for your ATARI computer are available now or will be available soon.

Energy CzarTM Hangman Conversational Spanish Conversational French Conversational German Conversational Italian European Countries & Capitals Touch Typing Statistics 1 An Invitation to ProgrammingTM 1 An Invitation to Programming 2 An Invitation to Programming 3 States & Capitals KingdomTM ScramTM (A Nuclear Power Plant Simulation) Biorhythm Music ComposerTM Blackjack Mortgage & Loan Analysis²





THE BASIC COMPUTER







INSTALLING THE TV SWITCH BOX


The TV Switch Box switches your television from regular TV programs to your ATARI 400 computer. You can also connect your antenna or cable TV to the TV Switch Box. When you want to switch from regular TV reception to your computer, just slide the switch from the **TV** to the **Computer** or **Game** position.

The TV Switch Box connects to the VHF antenna terminal at the back of your TV set. But first, you'll need to disconnect the present antenna or cable from the TV and reconnect it to the side of the TV Switch Box labeled **Antenna**.


Notice
whether the cable
is round or flat. If you
have a flat, twin-lead cable,
connect it to the terminals
marked 300 Ohm on the TV Switch
Box. If you have a round cable,
screw it onto the threaded connector marked 75 Ohm.

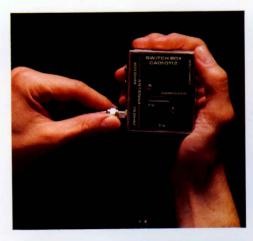

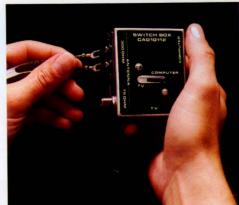

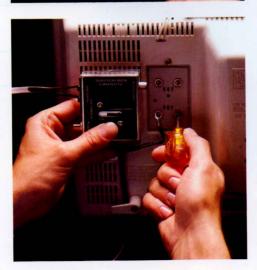


Now locate the short twin-lead cable marked **TV** that comes from the TV Switch Box and connect it to the two VHF terminals on your TV set.

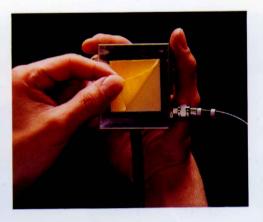

Peel off the protective cover sheet from the self-adhesive square and stick the box onto the back of your TV. If your TV set was connected to a flat, twin-lead (300 Ohm) cable, you're finished installing the TV Switch Box.

 However, if the cable is a round (75 Ohm) one, you may need to adjust the antenna terminal switch on your TV set so it can receive the 300 Ohm signal from the TV Switch Box. Check the antenna connection on the back of your TV and adjust it according to the following diagrams.




If it looks like this, push the switch to the 300 Ohm (300Ω) position.

If it looks like this, loosen the screws holding the U-shaped slider and move it to the position marked 300 Ohm or 300 Ω .

If it looks like this, screw the short round wire into the connector provided.




CONNECTING THE ATARI 400 COMPUTER CONSOLE

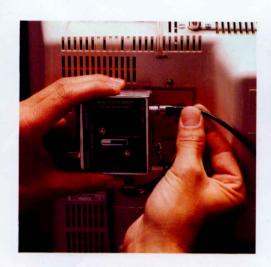

Locate the round cord that comes from the back of computer console. Plug the end of this cord into the terminal on the TV ritch Box labeled **Computer** or **Came**. Make sure the TV Switch Box is set to the **Computer** position.



Turn on your TV set and tune it to Channel 2 or 3
— whichever is weaker in your area.

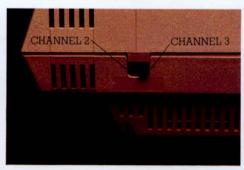


Set the Channel Select
Switch on the back of the
computer console to the
same channel. After you
turn on the computer, you
may need to adjust the fine-tuning
knob on your TV to improve reception from the computer.



Locate the AC Power
Adaptor that comes with
the computer and plug
the round end of the
Power Adaptor into the
connector labeled **Power Jack** on
the side of the computer console.

Plug the other end into a wall outlet.

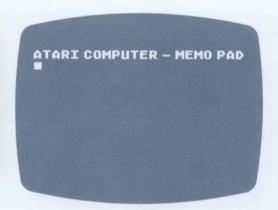

You're now ready to turn on your computer. The main power switch, labeled Power On/Off, is located on the side panel. As soon as you turn it on (provided the cartridge door is closed and no cartridge is inserted), the words ATARI COMPUTER – MEMO PAD appear on your TV screen. Whatever you type on the keyboard is now displayed on the TV screen.

You may notice that the colors on your TV screen change periodically if you don't use your computer for a few minutes. This is perfectly normal and is done to protect your TV set.

If your TV doesn't display the words ATARI COMPUTER – MEMO PAD or the words you type, you may have a problem. First, check over all the previous steps. If you think your computer needs service, contact the Authorized ATARI Service Center listed in the yellow pages of the telephone directory. Or call the ATARI Customer Service Department toll free at 800-538-8547 from anywhere in the continental U.S. (from California, call 800-672-1430).

INSERTING CARTRIDGES

CONNECTING OTHER EQUIPMENT



ush the cartridge door release lever down to raise the cartridge door. Whenever you do this, the ATARI 400 computer automatically turns itself off. It turns itself back on when you close the door.



Insert the cartridge into the slot with the label facing you. Press down carefully and firmly. When you close the cartridge door, the red power indicator at the right of the keyboard lights up, and the TV screen displays the title screen for the cartridge you selected. Then follow the instructions that come with the cartridge.



When you insert most cartridges (particularly games), many of the keys on the keyboard stop working. The instructions that come with the cartridge tell you which of the remaining keys to use for that cartridge.

our ATARI 400 computer is designed so you can easily connect your kit, or add other ATARI components, depending on how you plan to use your computer. These components simply plug together so you can develop or expand a system for a particular purpose. You'll find directions for connecting kit components such as the ATARI 410 Program Recorder in the instructions that come with that product.

If you'd like to expand your system, the ATARI Personal Computer Product Catalog, available from your local ATARI dealer, explains how many other ATARI products can enhance your computer.

